

# USING THE PRECISIO ALARM SYSTEM

## Main Modes

The PRECISIO system has **two main modes**:

### 1. Surveillance Mode

- The alarm monitors the pool, and the indicator **flashes green quickly**.
- If a body **weighing 6 kg or more** falls into the water, the alarm (100 dB) is triggered.

### 2. Swimming Mode

- The system is temporarily deactivated, and the indicator **flashes red quickly**.
- It automatically reactivates after **approximately 10 minutes** once the water has calmed.
- While in this mode, **no alert** will be triggered in case of a fall.
- **Never leave the pool unattended while this mode is active!**

## Activating Swimming Mode

- Enter your **personal code** (default: 1234).
- The indicator flashes **red**, and a low-pitched beep sounds.

## Automatic Reactivation

- After swimming, the alarm reactivates automatically once the water is calm (about 10 minutes).
- A **beep** sounds, and the indicator turns back to **flashing green**.

## Manual Reactivation

- Press **any button twice** on the keypad.
- If the water is still too disturbed, a low-pitched beep will sound, and reactivation will be delayed.
- **Ensure the water is calm before restarting surveillance.**

## Turning Off the Alarm Completely

- To completely turn off the alarm (e.g., to change the batteries), enter the sequence: **3 + 4 + 3 + 4 + 3 + 4**.

## Changing the Confidential Code

- Enter the sequence: **3 + 4 + 1 + 2**, then enter your **new 4-digit code**.
- A **long beep** confirms the change.

## System Reset

- Restores factory settings (useful if you forget your code).
- Enter the sequence: **3 + 4 + 1 + 1**.

## Changing the Batteries

- Use **4 LR20 alkaline batteries** (Duracell PC1300 or MN1300).
  - Replace them as soon as the **low battery signal sounds**.
  - **Do not use rechargeable batteries.**
- 

# SAFETY RECOMMENDATIONS

## Supervision and Vigilance

- **Active supervision of children is essential.**
- **Assign one responsible adult** to monitor the pool.
- Prevent children from accessing the pool without supervision.
- Never leave **floating toys in the pool** when an adult is not present.
- Teach your children **to swim as early as possible**.
- Keep a **lifebuoy and a rescue pole nearby**.
- Avoid running or engaging in dangerous games around the pool.
- **Do not dive** if the water depth is less than 1.80 m.

## What to Do in Case of an Alert


- The alarm signals danger, requiring a **quick intervention (<3 minutes)**.
- **If the failure signal sounds, act immediately** to repair the alarm.
- During automatic reactivation, an adult **must remain near the pool**.

## Weather Precautions

- In case of **strong winds or storms**, the alarm may trigger false alerts.
- Snow and ice can **prevent proper alarm operation**.
- During winter, either:
  - Keep the pool filled and use an **active winterizing system**.
  - **Deactivate and store** the alarm if another safety system is in place.

## Emergency Numbers to Remember

- **Fire Department (France): 18**
- **Emergency Medical Services (SAMU) (France): 15**
- **European Emergency Number: 112**
- **Poison Control Center:** (Fill in with local number)

 **Warning!** A child can drown **silently within minutes**. **Constant supervision** remains the most effective way to prevent accidents.